

Installing the Danalock on a door with a Euro cylinder




Below we will take you through the mounting of Danalock, on your door/cylinder.

The cylinder could look like the one on the left or it could also be a cylinder with a key on the backside or a different model, this is just an example.

First, you have to order a new cylinder with your Danalock. To find out what size cylinder to order, just follow these steps:

1. Dismount your existing cylinder. You do this by unscrewing the screws in the door that holds the cylinder.
2. Now you will have to measure the cylinder because you will need the measurement to order a new cylinder. You measure the cylinder as shown in the drawing below.

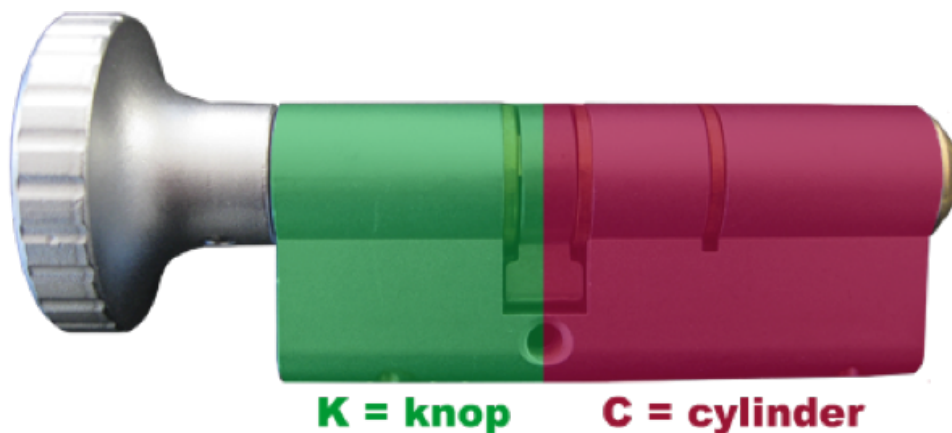

3. Write down the measurements for the red field. You measure the lock from the middle of the screw hole and out. Choose the cylinder in our web shop that comes closest to your measure.

The Cylinder comes in fixed sizes:

- 30 x 30 mm
- 30 x 35 mm
- 30 x 40 mm
- 30 x 45 mm
- 30 x 50 mm

Remember If the length of your cylinder falls inbetween these measurements, it's better to choose a cylinder slightly too long . If you need a specific cylinder size larger than listed, please contact us at: info@danalock.com

4. When you receive a new cylinder simply install in your door by following the attachment guide on our website
5. Finally, you place Danalock on the cylinder, and tighten the screws on Danalock, locking it to the cylinder.